

USER GUIDE

READ BEFORE USING

CobraCut™ Series Baler Belt Cutters



CobraCut™ 9



CobraCut™ 20



THE BALER BELT EXPERTS



WARNING: FAILURE TO FOLLOW THIS GUIDE MAY RESULT IN SERIOUS INJURY!
USING THIS MACHINE WITH RESPECT AND CAUTION WILL CONSIDERABLY REDUCE THE RISK OF PERSONAL INJURY.

SAFETY GUIDE FOR COBRACUT™ SERIES BALER BELT CUTTERS

READ AND UNDERSTAND THIS INSTRUCTION MANUAL BEFORE OPERATING THE COBRACUT™ BALER BELT CUTTER

1. If you are not thoroughly familiar with the operation of the CobraCut™, obtain advice from a qualified instructor or call 800-383-2469
2. Stay alert. Do not operate while under the influence of drugs, alcohol, or medication.
3. Always wear safety approved personal protection equipment.
4. Keep work area clean and free of debris.
5. Recommended operating temperature range: 20° F (-6° C) to 115° F (46° C)
6. Keep children and unauthorized persons away from the CobraCut™ and work area.
7. Make sure tool is secure. Operate only on a firm substrate or solid stand.
8. Use the right tool. Do not force the CobraCut™ or use it for a job for which it was not intended; the CobraCut™ is designed to cut Rubber Belting. SEE CUT GUIDE PAGE 6.
9. Keep blade sharp. A dull blade will not perform properly.
10. Always keep hands away from blade while operating or carrying.
11. Do not alter or misuse this tool. The CobraCut™ is precision built; modifications not specified in this manual may result in a dangerous condition and voids any or all warranties
12. Maintain CobraCut™ with care. Keep blade sharp and clean. Follow instructions for lubricating and changing accessories. See page 6.
13. Use only recommended accessories. The use of improper accessories may cause hazards or injury and voids any or all warranties.
14. Never leave the CobraCut™ unattended. Secure the Handle with the Safety Lock when not in use. SEE PAGE 5

SET UP




YOUR COBRACUT™ BALER BELT CUTTER COMES READY TO ASSEMBLE!*

Please Review and Verify Parts Included in Box


1. Power Assembly
1a. Safety Lock pin
2. Handle Assembly
3. Fence
4. Table
5. Tail
6. Rails (2)
7. Hone Stone
8. Hardware Kit

YOU WILL NEED #2 & #3 PHILLIPS HEAD SCREWDRIVERS AND A 1/2" (13MM) SOCKET OR WRENCH.

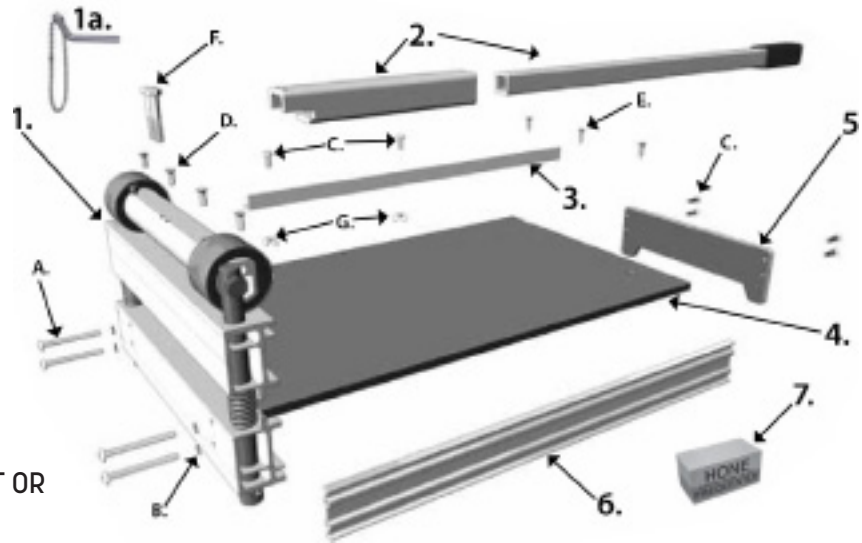

Hardware Kit:



- | | |
|---------|---|
| Item A. | (4) 6mm x 65mm PH Phillips Machine Screws |
| Item B. | (4) M6 Star Washers |
| Item C. | (6) 6mm x 25mm PH Phillips Machine Screws |
| Item D. | (5) M6 x 16mm FH Phillips Machine Screws |
| Item E. | (4) #10 x 1 FH Phillips Self Tapping Screws |
| Item F. | (2) M8 x 50mm Hex Bolts |
| Item G. | (2) M6 Wing Nuts |

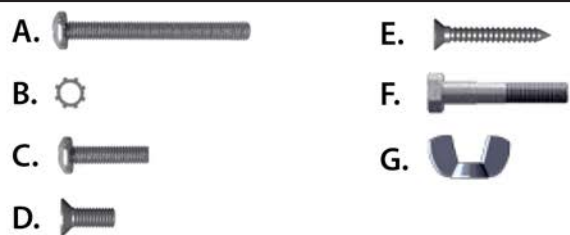

*The Hardware Kit is used in multiple models. Your CobraCut™ may not use all of the items listed.

Assembly

1. **ATTACH RAILS:** Attach rails and mounting bracket to Power Assembly base using Item A machine screws, fitted with Item B star washers.
2. **ATTACH TAIL:** Attach tail and mounting bracket to rails using Item C machine screws. Make sure holes in tail are facing up.

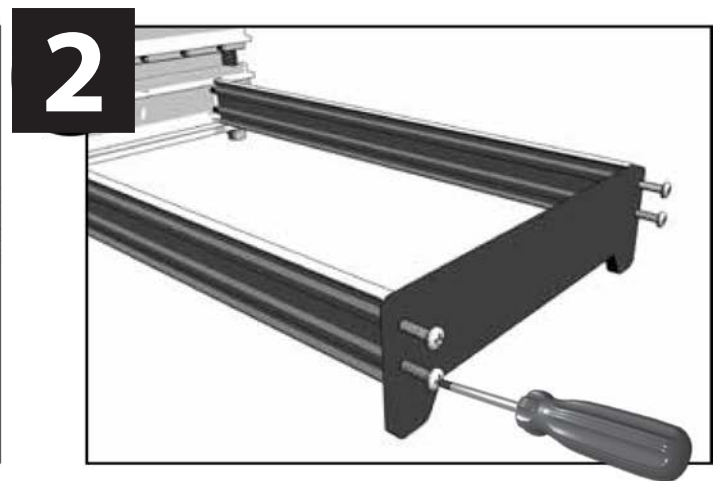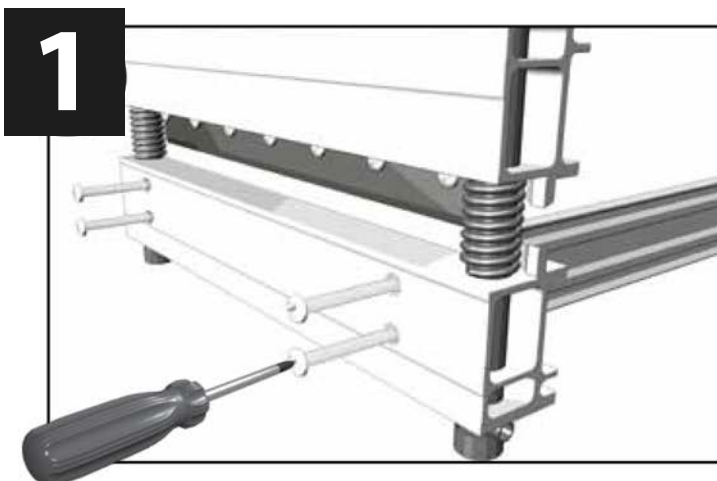

SET UP

IMPORTANT

Start all screws BY HAND when assembling your CobraCut™. This will help avoid cross-threading.


Avoid cross-threading by using your fingers to start all screws



3. Attach Table

3a. Attach front of table to base, using Item D screws. Tighten with #3 Phillips.


3b. Attach back of table to tail using Item E self tapping screws. Tighten with #2 Phillips.

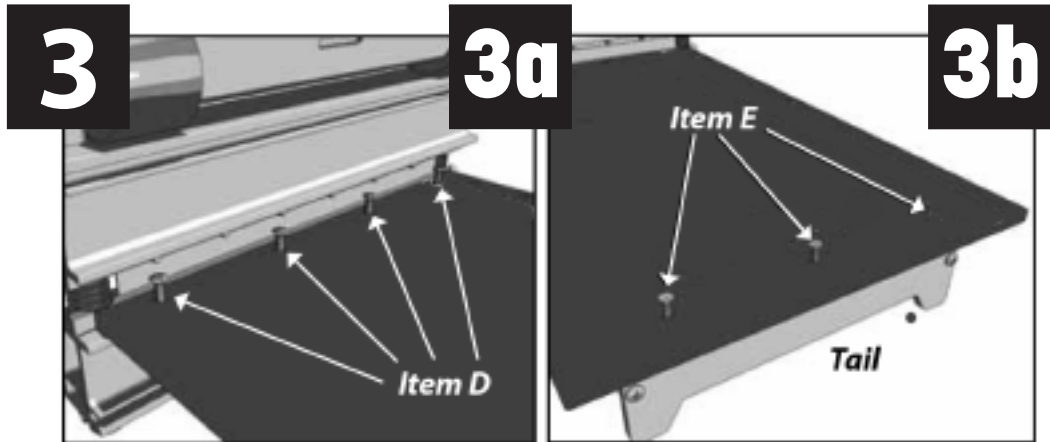

4. To Attach Handle


Insert Item F screws and tighten with 1/2" (13mm) wrench.

Note: To ensure correct alignment, start each of the bolts by hand before using wrench.

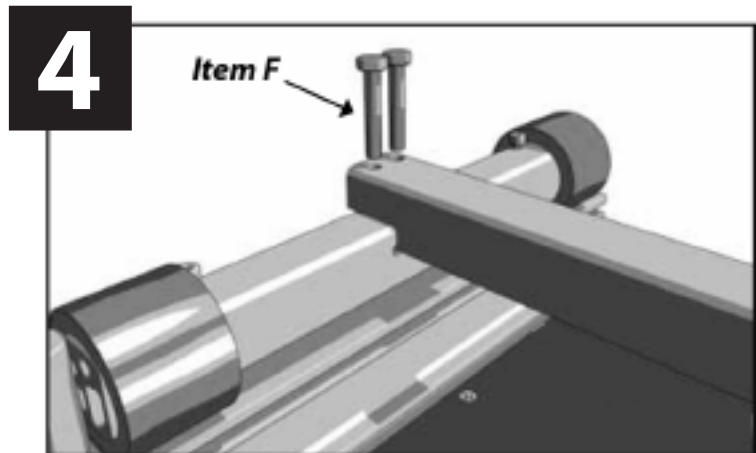

5. Attach Fence

Attach fence in one of the two hole sets on the table.

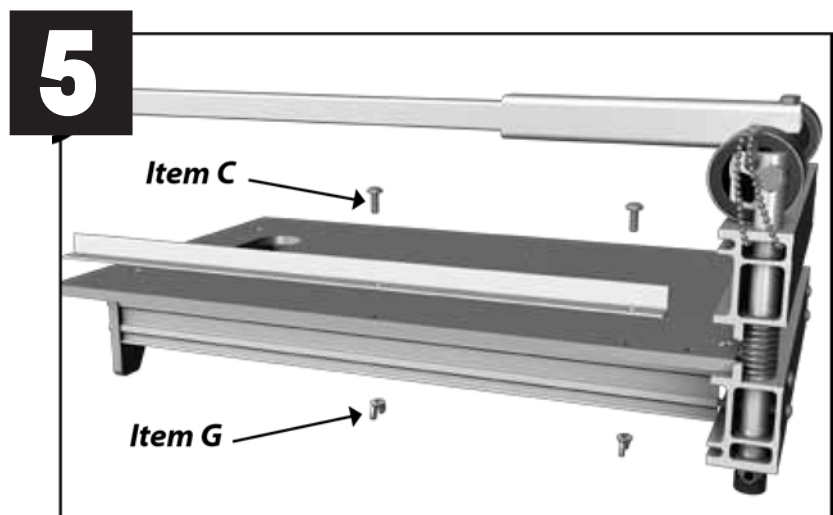

MAKING CUTS




CAUTION! WEAR HAND AND EYE PROTECTION WHEN OPERATING THE COBRACUT™


WARNING!
Blade is very sharp.
Keep fingers away
from blade.

Use your
CobraCut™
Baler Belt Cutter
to cut belting
material only!
Do not use it
to cut fasteners,
connecting
pins, metal,
or other
unapproved
materials.


Cobracut™ Series Baler
Belt Cutter User Guide

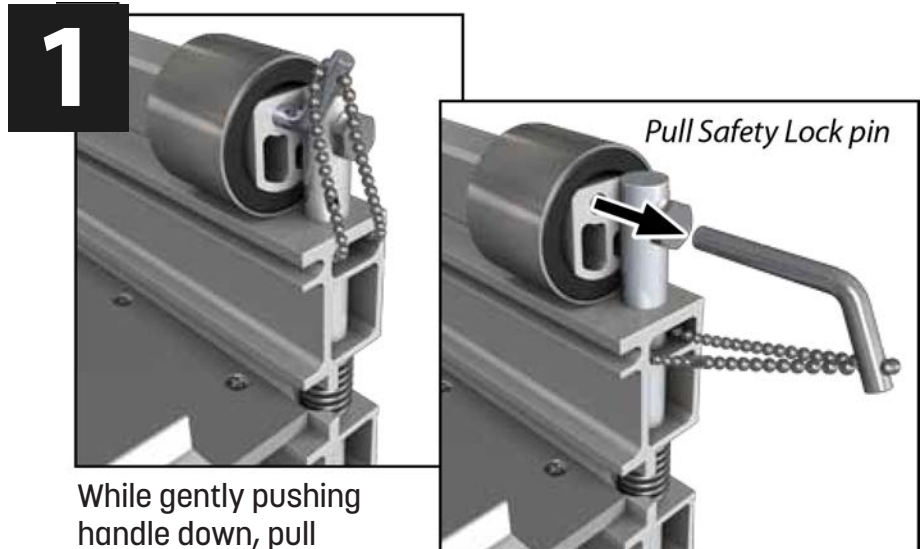

While gently pushing
handle down, pull
Safety Lock pin out.
Then lift handle.

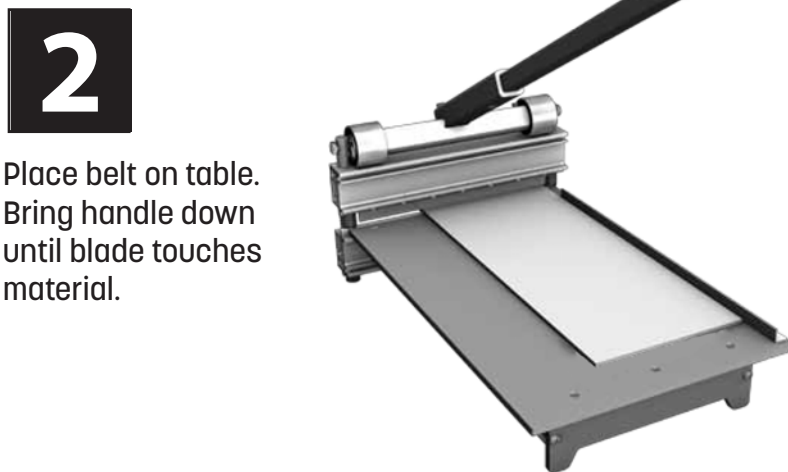


Place belt on table.
Bring handle down
until blade touches
material.

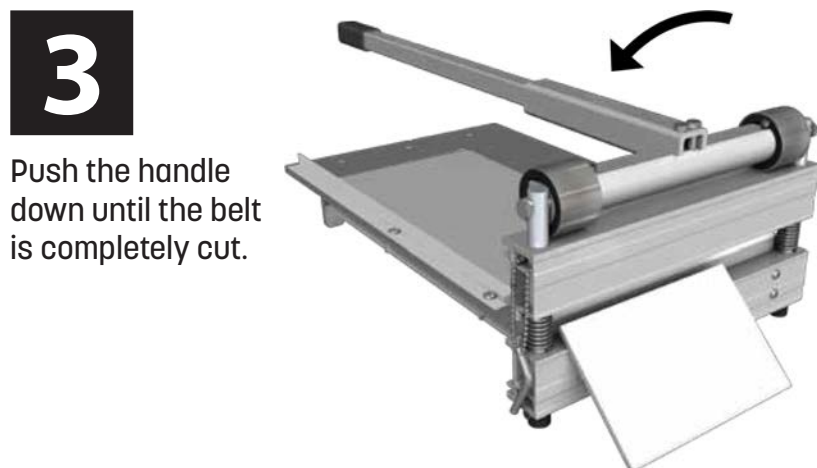


Push the handle
down until the belt
is completely cut.

MAINTENANCE

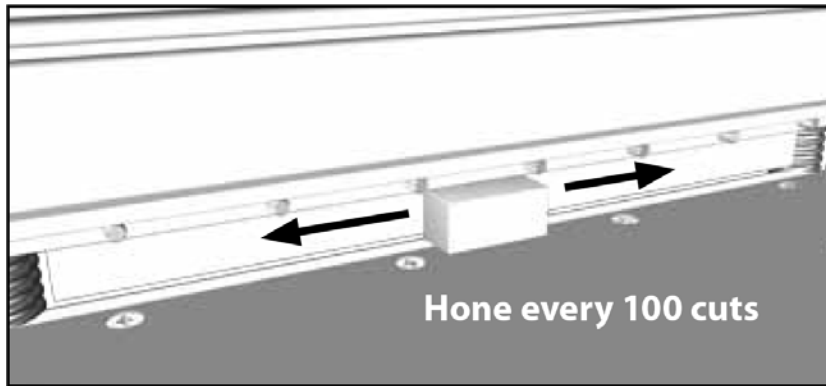

HONING THE BLADE

Push the handle down until blade is 1/4" (6mm) open. Lay the hone stone against the flat face of the blade (side toward the table). Slide from end to end 2 or 3 times. This removes small burrs that may form during operation.

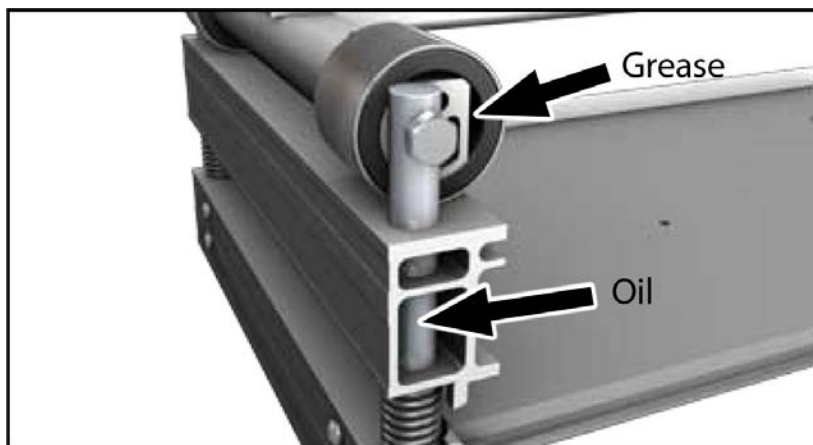

GREASING / LUBRICATING

After every 100 cuts, it is recommended that you lubricate the wear points of the pins and the bearings as shown. Use a light oil (i.e. 10W motor oil). This will prevent the machine from wearing out prematurely. Apply grease (wheel bearing grease) frequently to the bearings where indicated.

ACCESSORIES



**COBRACUT™
REPLACEMENT BLADE
9" & 20"**



**HONING
STONE**



LUBRICANT



REPLACEMENT ANVIL



REPLACEMENT FENCE



CUTTER STAND

WARRANTY



30 Day Satisfaction Guarantee

AG Belt is confident that you will be absolutely pleased with the purchase of the CobraCut™ Baler Belt Cutter. If, for any reason, you are not completely satisfied with your cutter, we will refund your purchase price at any time within 30 days of your original purchase (receipt required). If you want to return your product under our 30-day no risk trial offer (valid only for purchases made in the US), please contact us at 1-800-383-2469 or 515-287-0310 for return instructions.

AG BELT ONE YEAR WARRANTY

AG Belt warrants only to the original purchaser of this product, when purchased from an authorized reseller or distributor, that this product will be free from defects in material and workmanship under normal use and service for one (1) year from initial purchase. This warranty includes all parts except the blade and cosmetic appearance (chips, dings, scratches) caused by normal use and wear. This warranty does not cover any damage due to accident, misuse, abuse or negligence. Further, it is valid only if the product is used with the cut products specified in the cut guide. Please refer to the User Guide for details or call AG Belt for technical support. In order to recover under this limited warranty, the purchaser must make claim to AG Belt within 60 days of occurrence and must present acceptable proof of original ownership (such as original receipt, warranty card registration, on-line registration, or other documentation AG Belt deems acceptable) for the product. AG Belt, at its option, shall repair or replace the defective unit covered by this warranty.

AG Belt disclaims all warranties, express or implied, including all warranties of merchantability and/or fitness for a particular purpose. Additional rights may be available under the laws of your state or province. Any and all warranties, written or implied, are void with any alterations to the product. Note: AG Belt shall not be liable for any special, incidental or consequential damages, including but not limited to lost revenue, lost profits, rental or replacement equipment, downtime, damage to property and third-party claims, arising out of any theory of recovery, including warranty, contract, statutory or tort.

To obtain warranty service, please visit www.agbeltinc.com/warranty-claim, or contact AG Belt at 1-800-383-2469 or 1-515-287-0310, for pre-authorization and further instructions.

Machine Serial Number: _____